


## Basic operation of media systems with Extron button controls

### Turn on/off

Switching the media system on and off while simultaneously switching the projector on and off.

When turning on or off, the corresponding button flashes while the system boots up or shuts down.

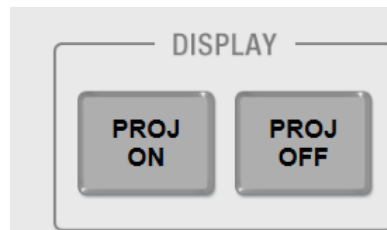

The sound of the sources is controlled using the rotary knob. Clockwise = louder  
Anti-clockwise = quieter

The bar display shows what volume can be expected.




Please make sure that your source also outputs sound at a sufficient volume. (We recommend that you set the output sound of your device to 100%).

### Volume


### Source selection

Select the available connection and signal sources by pressing the corresponding labeled button. When the source is active, the corresponding button lights up brightly.

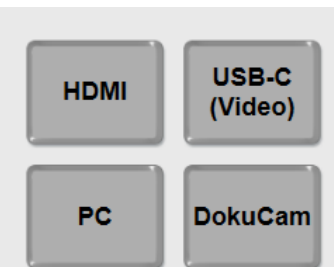

Each room has at least 1x HDMI and 1x USB-C as a connection source.

In some rooms the number of available buttons may vary. The maximum number is shown here.

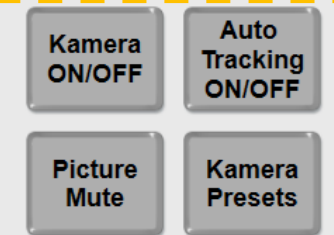

Various special functions can be activated here, such as darkening the projector image or operating the hybrid technology (if this is available in the room).

When you activate the "Dark Image" function, the button flashes as long as the image on the projector is dark. Activating it again will turn the image back on and the button will go out.

### Special functions

## Basic operation of media systems with Uni- button controls

### Turn on/off

Switching the media system on and off while simultaneously switching the projector on and off.

When turning on or off, the corresponding button flashes while the system boots up or shuts down.

Select the available connection and signal sources by pressing the corresponding labeled button. When the source is active, the corresponding button lights up brightly.

Each room has at least 1x HDMI and 1x USB-C as a connection source.

Some rooms are equipped with Wireless AV as a source instead of USB-C/HDMI 2.

### Source selection

### Volume


### Special functions

Various special functions can be activated here, such as darkening the projector image or operating the hybrid technology (if this is available in the room).

When you activate the "Dark Image" function, the button flashes as long as the image on the projector is dark. Activating it again will turn the image back on and the button will go out.

The volume can be changed by pressing or holding the "Volume Down" and "Volume Up" buttons.

Please make sure that your source also outputs sound at a sufficient volume. (We recommend that you set the output sound of your device to 100%).

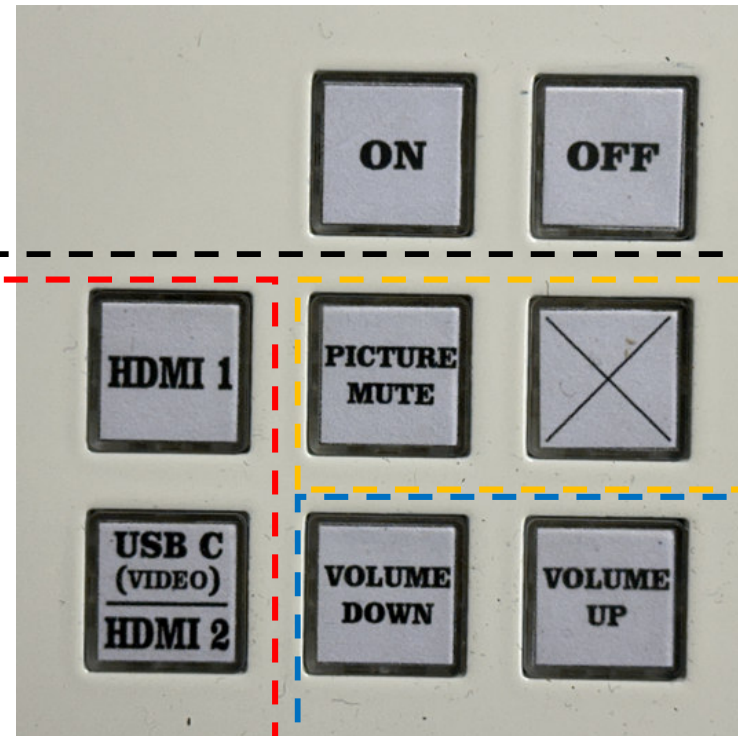

## Basic operation of media systems with Crestron- button control

### Turn on/off

Switching the media system on and off while simultaneously switching the projector on and off.

When switching on or off, both LEDs above the buttons flash alternately while the system is booting up or shutting down.

Various special functions can be activated here, such as darkening the projector image or operating the hybrid technology (if this is available in the room).

When you activate the "Dark Image" function, the button flashes as long as the image on the projector is dark. Activating it again will turn the image back on and the button will go out.

### Special functions

Select the available connection and signal sources by pressing the corresponding labeled button.

When the source is active, the corresponding LED above the button lights up red.

### Source selection

The volume can be changed by pressing or holding the "Volume Down" and "Volume Up" buttons.

This function is not available in some rooms. Here you can only adjust the volume on your device.

Please make sure that your source outputs the sound at a sufficient volume.

### Volume

